

Operating instructions

Horizon Range HZ51 Model

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED



Chair Height Adjustment. The overall height of the chair can be adjusted by lifting the larger of the 2 levers located below the seat on the front, right-hand side. Lift your weight off the chair allowing it to rise and release the lever at the required height. To lower the chairs simply lift this lever and release at the required height.



Back Recline Adjustment. The angle of the back can be adjusted by lifting the lever located below the seat on the front, left-hand side. The back can be locked at the required angle or left in the unlocked position allowing the back to follow your movements in free float mode. Please be aware that there is a safety feature that requires you to lean gently into the back of the chair before the lock will release.

The tension of the back recline can be adjusted by twisting the rotary control located under the front of the seat on the right-hand side. This tension control slides out for easy access.



 
Seat Angle Adjustment. The seat angle can set in 3 positions. To do this lift the lever located below the middle of the seat on the right hand side, adjust the seat and lock in place.



Seat Depth Adjustment. The seat depth can be adjusted by turning the handwheel located on the right hand edge of the seat. Pull the handwheel away from the seat and rotate to adjust the horizontal seat position.



Inflatable Lumbar Support. The inflatable lumbar support is adjusted using the hand bulb located under the right-hand side of front edge of the seat. Squeeze the bulb to inflate and press the button on the bulb to deflate.



Back Height Adjustment. The back height can be adjusted by lifting the back up a step at a time until the correct positioning of the lumbar support is achieved. When the back reaches the top of its travel it will drop back to the start position.



Arm Height Adjustment. The height adjustable arms have a lever located under the inside edge of the arm pad. Press this in and lift the arm to the desired position.



Folding Adjustable Arms. If the chair is fitted with optional folding adjustable arms these have a button located half way down the outside of the post to adjust the height and a second button at the bottom to allow the arm to be rotated backwards, out of the way.