 


Operating instructions

Impact IM21 & IM31 Executive Task Chairs

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED



Chair Height Adjustment. The overall height of the chair is adjusted by lifting the lever located below the front of the seat on the right hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower simply lift the lever.



 
Back Angle Adjustment. The back angle is adjusted by pushing down the lever located below the seat on the left-hand side. Please be aware that there is a safety feature that requires you to lean gently into the back before it will release. The back can be locked at the required angle by lifting the lever or left unlocked to follow the user's movements. The tension of the recline is adjusted by turning the knob located under the front of the seat.



Seat Angle Adjustment. The angle of the seat can be adjusted by lifting the lever located under the right hand side of the seat, towards the back. Lift the lever to set seat angle and push down to lock.



Seat depth Adjustment. The seat depth is adjusted by pushing in the button located in the middle of the right hand side of the seat. Slide the seat forwards and release the button to lock in desired position.



Back height adjustment. The back height is adjusted by lifting it up a step at a time for correct positioning of the lumbar support. When the back reaches the top of its travel it will then drop back to the start position.

 


Inflatable Lumbar Support. The inflatable lumbar support is adjusted using the hand bulb hanging under the left-hand side of the seat. Squeeze the bulb to inflate and press the button on the bulb to deflate.

Operating instructions

Impact IM21 & IM31 Executive Task Chairs

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED



Height And Width Adjustable Arms. The height adjustable arms have a button located on the outside face of the upright support. Press this in, set the arm at the desired height and release the button to lock. The arms adjust for width by unlocking the paddle at the base of each arm, sliding the arm outwards and then lifting the paddle to lock in position.



Folding Adjustable Arms. If the chair is fitted with optional folding adjustable arms these have a button located half way down the outside of the post to adjust the height and a second button at the bottom to allow the arm to be rotated backwards, out of the way.



Sliding Arm Pad. The optional sliding arm pad can be unlocked by depressing the button located on the edge of the pad.