

# Operating instructions

## Ovair Task Chairs

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED



**Chair Height Adjustment.** The overall height of the chair is adjusted by lifting the lever located below the middle of the seat on the right hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower simply lift the lever.



**Back Angle Adjustment.** The unique characteristic of the Ovair Synchronized mechanism is its automatic tension adjustment to accommodate different user weights. This makes Ovair ideally suited for use in free float (unlocked) mode, encouraging regular movement and the associated health benefits this can bring.

The synchronised recline of the seat and back is locked and unlocked by pressing in and releasing the button located in the centre of the height adjust lever referred to above. Please be aware that there is a safety feature that requires you to lean gently into the chair back before it will release. The back can be locked in any of five positions or left unlocked to follow your movements.



**Lumbar Height Adjustment.** The lumbar pad height is adjusted by sliding it up or down for correct positioning of the lumbar curve.



**Height Adjustable Arms.** The arms have a button located on the outside face of the upright support. Press this in, set the arm at the desired height and release the button to lock.



**Folding Adjustable Arms.** If the chair is fitted with optional folding adjustable arms these have a button located half way down the outside of the post to adjust the height and a second button at the bottom to allow the arm to be rotated backwards, out of the way.



**Seat Depth Adjustment.** If the chair is fitted with an optional seat slider the seat depth is adjusted by pushing the handle that is located just below the right hand edge of the seat. Slide the seat forwards and release the handle to lock the seat in the desired position.