 


Operating instructions

Score Range SCT142

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED



Chair Height Adjustment. The overall height of the chair can be adjusted by lifting the lever located below the middle of the seat on the right-hand side. Lift your weight off the chair allowing it to rise and release the lever at the required height. To lower the chairs simply lift this lever and release at the required height.



Synchronised Recline Adjustment. The synchronised recline of the seat and back can be adjusted by twisting the rotary control located below the seat on the left-hand side. This control can be slid outwards for easier access. The seat and back can be unlocked by twisting the control anti clockwise or locked at the required angle by twisting the control clockwise. If the control is left in the unlocked position the seat and back will follow your movements in free float mode. Please be aware that there is a safety feature that requires you to lean gently into the back of the chair before the lock will release.

The tension of the recline can be adjusted by twisting the rotary control located under the front of the seat on the right-hand side. This tension control slides out for easy access.



Arm Height Adjustment. The height adjustable arms have a lever located under the inside edge of the arm pad. Press this in and lift the arm to the desired position.



Folding Adjustable Arms. If the chair is fitted with optional folding adjustable arms these have a button located half way down the outside of the post to adjust the height and a second button at the bottom to allow the arm to be rotated backwards, out of the way.



Inflatable Lumbar Support. If the chair is fitted with an optional inflatable lumbar support this is adjusted using the hand bulb hanging under the left-hand side of the seat. Squeeze the bulb to inflate and press the button on the bulb to deflate.



Seat Depth Adjustment. If the chair is fitted with the optional seat slide the seat depth is adjusted by lifting the lever located below the middle of the seat on the left-hand side. Slide the seat forwards and release the lever to lock in desired position.