

Operating instructions

Industrial Range IND5 & IND6

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED



Chair Height Adjustment. The overall height of the chair is adjusted by lifting the lever located below the middle of the seat on the right-hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower simply lift the lever.



Back Recline Adjustment. The back angle is adjusted by lifting lever located below the back of the seat on the right-hand side. It can be locked at the required angle by pushing the lever down or left unlocked to follow the user's movements.



Back Height Adjustment. The back height can be adjusted by loosening the handwheel located behind the seat, below the stem of the back. Lift the back up until the correct positioning of the lumbar support is achieved and tighten the handwheel.



Height Adjustable Arms. The arms have a button located on the outside face of the upright support. Press this in, set the arm at the desired height and release the button to lock.